

MSIG
SPECIALTY MARINE



VENTILATION

CIRCULAR

We frequently handle cargo claims that are the result of moisture damage. As moisture damage to a cargo is caused by ship's sweat or cargo sweat, proper ventilation plays a key role in preventing this problem.

NOVEMBER 2023

All Rights Reserved

The cargo ventilation system should be used to:

- ◆ prevent cargo sweat and ship's sweat
- ◆ supply fresh air to the cargo
- ◆ prevent poisonous gasses from accumulating
- ◆ remove the odour of previous cargo
- ◆ disperse the heat and moisture generated by some types of cargo

This circular is a practical guide that explains how cargo sweat and ship's sweat occur, and how these phenomena can be prevented by using the ventilation system correctly. Furthermore, we have included several practical tips and two simplified flow charts. These charts provide practical guidance on when to ventilate the cargo.

Ventilation

In terms of ventilation, we divide cargoes into two different groups.

- 1) Hygroscopic cargoes, such as agricultural products (grain, rice, flour, sugar, cotton, tobacco, cocoa, coffee and tea). They contain an inherent quantity of moisture that can interact with the air.
- 2) Non-hygroscopic cargoes, such as steel products. They do not contain an inherent quantity of moisture that can interact with the air.

As discussed in the introduction, ventilation is essential to avoid cargo becoming damaged by cargo sweat or ship's sweat. The ventilation system must always be used until the cargo has been discharged, and ventilation should not be stopped while the vessel is waiting to berth.

Maintaining accurate ventilation records on the vessel is essential to defend shipowners against cargo claims. It is important to record periods of ventilation as well as periods when ventilation is not possible or necessary.

Cargo Sweat

Cargo sweat occurs when warm moist air comes into contact with the surface of a cold cargo. This happens if a bulk hygroscopic cargo is loaded in a cold region for transport to a warm region. As the vessel heads towards the warm region, the temperature of its structure will gradually increase in line with the seawater temperature and air temperature.

Hygroscopic cargoes warm up more slowly, because they have a lower thermal conductivity than a non-hygroscopic cargo such as steel. Consequently,

the temperature of these cargoes is lower than the temperature of the external air during the voyage. If the dew point of the external air is higher than the temperature of the air in the hold and the cargo is ventilated, warm moist air could enter the hold and condense onto the cooler surface of the cargo, forming cargo sweat.

Several non-hygroscopic cargoes (steel products, machinery, earthenware and canned goods) may also be at risk of sweat damage because these cargoes may interact with the moisture, which can cause rust.

To prevent cargo sweat, the general principle is that cargo ventilation should not be used when entering a warm climate from a relatively cold climate. It is only safe to ventilate when the temperature of the cargo is higher than or equal to that of the external air, or if the dew point of the external air is lower than that of the air in the hold.

Ship's sweat

Ship's sweat occurs when warm moist air comes into contact with a cold ship's steel structure inside the cargo hold. For instance, if cargo in bulk is loaded in a warm region for transport to a relatively cool region, the seawater and air temperatures begin to fall as the vessel enters the colder climate. The ship's steel outer hull is a good thermal conductor and in direct contact with the seawater and air, so it is rapidly cooled. This cooling is gradually transferred from the outer hull to the hold structure.



The cargo is a poor thermal conductor, so it cools more slowly while tending to maintain its higher loading temperature, especially toward the insulated center of the cargo. Warm moist air then rises from within the cargo to the underside of the hatch covers, as well as to the sides of the hold due to convection. If this air encounters any parts of the ship's steel structure at a temperature below the dew point of the cargo hold air, then moisture will condense on the structure. This is commonly known as ship's sweat.

Ship's sweat can also occur because of local heating or cooling events within the vessel. If the cargo contains natural moisture, then any heating of the cargo by an external source such as a fuel oil tank or an engine can also result in condensation forming on cold structural parts. Another possible cause of condensation could occur if refrigerating units cool the ship's steel structure below the dew point of the air in the hold, leading to condensation on the cold steel.

The most effective way to prevent ship's sweat is to ensure that the cargo is sufficiently dried before loading.

Case Study

A bulk carrier vessel with five hatches and gear onboard transported a shipment of bagged rice from Myanmar to Ivory Coast. The cargo was loaded by the terminal stevedores on slings (20 bags x 5 = 100 bags) with the ship's gear. During discharge, partly moldy bags of rice were found and a surveyor was instructed to investigate the cause and extent of the damage. According to the surveyor, the root cause of the mold damage was excessive moisture in the rice. During the sea passage, the excessive moisture content was released and condensed on the cold steel parts of the holds. The vessel was sailing in a temperate climate (outside air temperature of 19 °C and sea temperature of 17 °C). It ultimately caused sweating of the ship's hull which resulted in moldy cargo.

In this particular case, there were also aggravating factors that caused mold to form in the cargo. The surveyor noted that the cargo holds were naturally ventilated. If the cargo holds had been ventilated mechanically, there would have been less damage to the cargo due to more air circulation inside the cargo hold.

Furthermore, no ventilation was allowed after departure from the port of loading. During a period of 12 days, the holds had to be kept tightly closed for fumigation reasons. During the voyage, ventilation of the holds was stopped during rain and bad weather. This led to start of moulding of the cargo.



Practical Tips

We recommend always calculating whether ventilation is necessary on the basis of the outdoor and cargoes dew point and the relative humidity. Nevertheless, the following rules of thumb can be followed when it comes to ventilation:

1. The Dew Point Rule

The Dew Point Rule states that a cargo hold should be ventilated when the dew point of the outside air is lower than the dew point of the air inside the hold.

2. The Three Degree Rule

The Three Degree Rule states that a cargo hold should be ventilated when the dry bulb temperature of the outside air is at least 3 °C lower than the temperature of the cargo.

In addition, bear in mind the following:

- ◆ Cold seawater may cause sweat locally
- ◆ Bunker tanks should be heated up until the fuel is just pumpable
- ◆ Temperatures inside and outside should preferably be measured 1.5 hours after sunrise, at 14:00 local time, and 1.5 hours after sunset

- ◆ Records need to be maintained daily, and parties must state the justification if ventilation is not applied (for example bad weather)

This information is intended for guidance only.
Should you require more information or assistance, please feel free to contact our Loss Prevention Services at LPS@msigspecialtymarine.com

The content of the above or attached text was prepared by MSIG Specialty Marine for the addressee and for informational purposes only. It does not constitute legal advice. No warranties are made regarding the thoroughness or accuracy of the information, and MSIG Specialty Marine is not responsible for any errors or omissions. Use of the information is at the user's own risk and MSIG Specialty Marine expressly disclaims all liability with respect to actions taken or not taken based on it. No rights can be derived from the information under any circumstances.



Michel Vonk
Technical Loss Prevention Consultant

+31 10 799 5900
michel.vonk@msigspecialtymarine.com

MSIG Specialty Marine offices: ANTWERP, HAMBURG, LONDON, PARIS, ROTTERDAM AND SINGAPORE

© November 2023. The information contained herein is intended to be for informational purposes only and is correct at the time of printing. This brochure is not, and is not intended to be construed as, an offering of MSIG Specialty Marine securities in the United States or in any other jurisdictions where such offers may be unlawful. The services and products mentioned in this brochure may not be available in the United States or in jurisdictions where Lloyd's does not have a trading license. Potential insureds should consult with an appropriately licensed broker in their area for further information. MSIG Specialty Marine Underwriting Limited is authorised by the Prudential Regulation Authority and regulated by the Financial Conduct Authority and the Prudential Regulation Authority under reference number 204918. Registered office The Leadenhall Building, 122 Leadenhall Street, London EC3V 4AG. Registered in England Company No. 02323018. MSIG Specialty Marine N.V. is registered in Belgium no. 0670.726.393. Registered address: office is Koning Albert II-laan 37, 1030, Brussels, Belgium. MSIG Specialty Marine (MENA) Limited is regulated by the Dubai Financial Services Authority (DFSA). MSIG Specialty Marine (MENA) Limited may only undertake the financial services activities that fall within the scope of its existing DFSA licence. MSIG Specialty Marine (MENA) Limited's principal place of business in the DIFC is MSIG Specialty Marine (MENA) Limited, Level 3, Precinct Building 2, Dubai International Financial Centre, Dubai, United Arab Emirates. P.O. Box 506929. This document is intended for Professional clients only as defined by the DFSA and no other person should act upon it. MSIG Specialty Marine Asia Pte Limited is approved by the Monetary Authority of Singapore to underwrite on behalf of the members of Syndicate 2001 at Lloyd's. Registered in Singapore No. 200711910C Registered office 138 Market Street #03-01 CapitaGreen Singapore 048946.



MSIG
SPECIALTY MARINE

MSIGSPECIALTYMARINE.COM

MSIG Specialty Marine NV - Beursplein 37, Rotterdam - PO Box 30152 - 3001 DD Rotterdam - Tel +31 10 2425 000

Registered with the Dutch Chamber of Commerce under number 24448058

MSIG Specialty Marine NV is authorised and regulated by De Autoriteit Financiële Markten Authority.


www.msigspecialtymarine.com

A member of **MS&AD** INSURANCE GROUP

All Rights Reserved

VENTILATION OF HYGROSCOPIC PRODUCTS

When to ventilate?

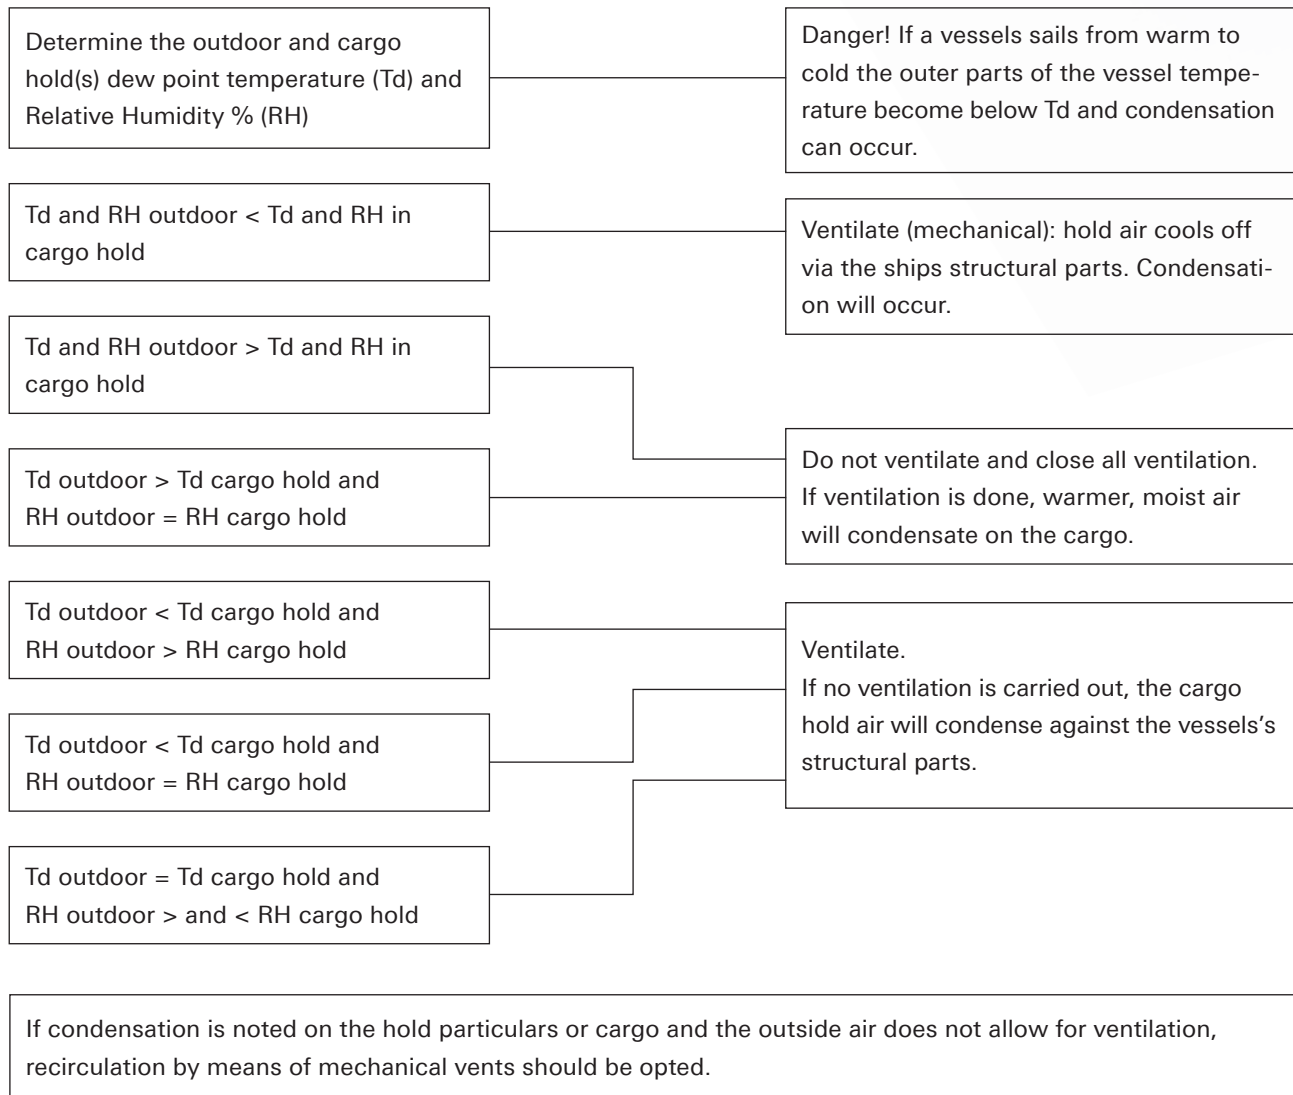

A clear logbook must be kept stating the following:

Outside temperature	Outside dew point temperature	Relative Humidity %	Cargo hold temperature	Cargo hold dew point temperature	Relative Humidity %	Ventilation start stop time
---------------------	-------------------------------	---------------------	------------------------	----------------------------------	---------------------	-----------------------------


The content of the above or attached text has been prepared by MSIG Specialty Marine for the addressee and for informational purposes only. It does not constitute legal advice. No warranties are made regarding the thoroughness or accuracy of the information contained in this content and MSIG Specialty Marine is not responsible for any errors or omissions. Use of it is at the user's own risk and MSIG Specialty Marine expressly disclaims all liability with respect to actions taken or not taken based on any contents of it, no rights can be derived from it under any circumstances.

MSIG Specialty Marine NV - Dutch Branch - Beursplein 37, Rotterdam - PO Box 30152 - 3001 DD Rotterdam
Registered with the Dutch Chamber of Commerce under number 24448058
MSIG Specialty Marine NV - Registered office at Boulevard du Roi Albert II 37, 1030 Brussels (Belgium) - Registration Number BCE 0670.726.393
Supervisory Authority : Financial Services and Markets Authority ("FSMA") Brussels - Statute : Belgian Mandated Underwriters and
Belgian Reinsurance agents - Operates in the Netherlands under the regime of freedom of establishment
MSIG Specialty Marine NV is a member of MS&AD Insurance Group Holdings, Inc.
www.msigspecialtymarine.com

A member of **MS&AD** INSURANCE GROUP

VENTILATION OF NON-HYGROSCOPIC PRODUCTS (e.g., steel products)

When to ventilate?

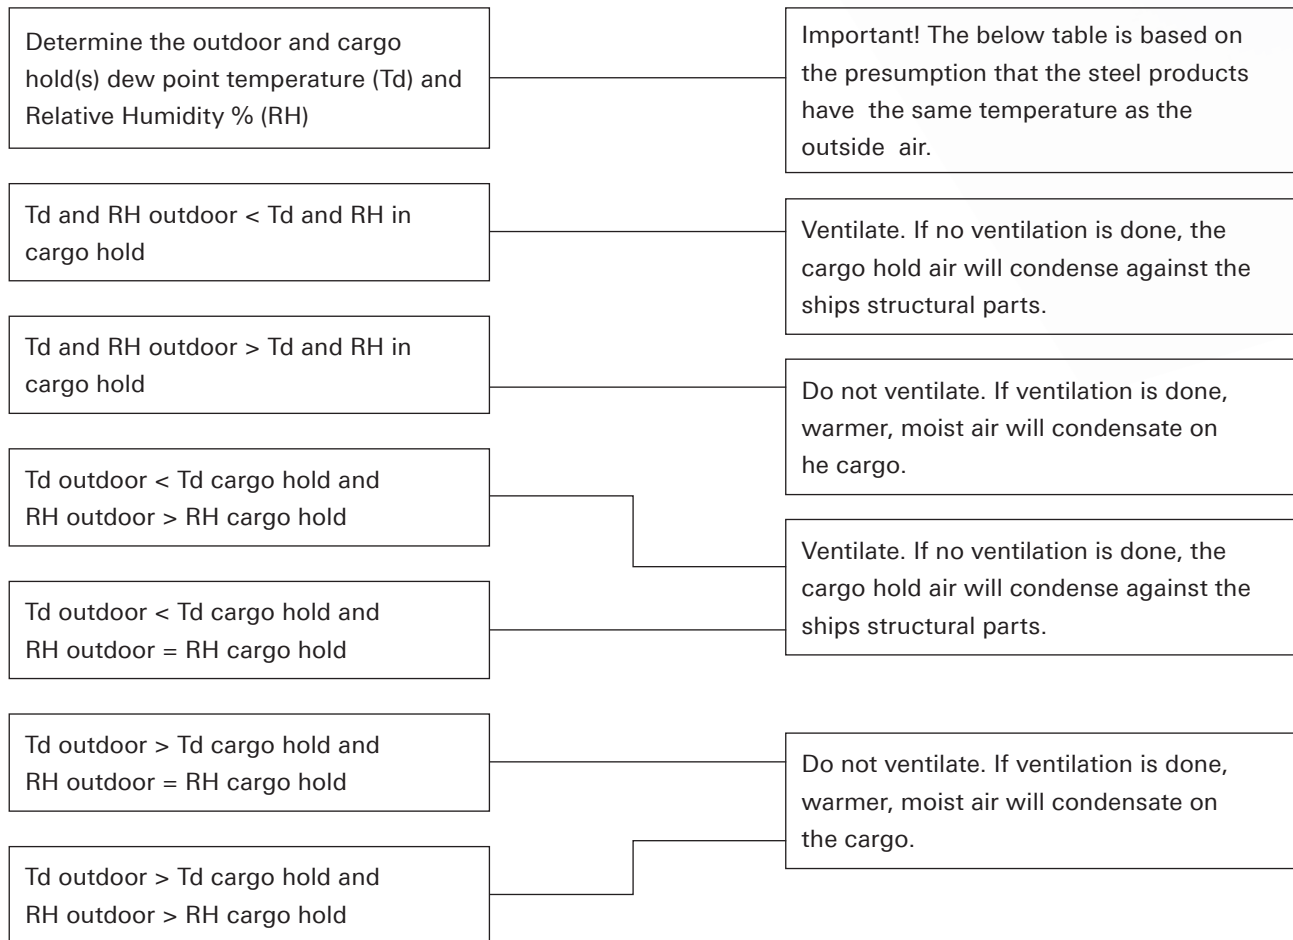

If condensation is noted on the hold particulars or cargo and the outside air does not allow for ventilation, recirculation by means of mechanical vents should be opted.

A clear logbook must be kept stating the following:

Outside temperature	Outside dew point temperature	Relative Humidity %	Cargo hold temperature	Cargo hold dew point temperature	Relative Humidity %	Ventilation start stop time
---------------------	-------------------------------	---------------------	------------------------	----------------------------------	---------------------	-----------------------------

The content of the above or attached text has been prepared by MSIG Specialty Marine for the addressee and for informational purposes only. It does not constitute legal advice. No warranties are made regarding the thoroughness or accuracy of the information contained in this content and MSIG Specialty Marine is not responsible for any errors or omissions. Use of it is at the user's own risk and MSIG Specialty Marine expressly disclaims all liability with respect to actions taken or not taken based on any contents of it, no rights can be derived from it under any circumstances.

MSIG Specialty Marine NV - Dutch Branch - Beursplein 37, Rotterdam - PO Box 30152 - 3001 DD Rotterdam

Registered with the Dutch Chamber of Commerce under number 24448058

MSIG Specialty Marine NV - Registered office at Boulevard du Roi Albert II 37, 1030 Brussels (Belgium) - Registration Number BCE 0670.726.393

Supervisory Authority : Financial Services and Markets Authority ("FSMA") Brussels - Statute : Belgian Mandated Underwriters and

Belgian Reinsurance agents - Operates in the Netherlands under the regime of freedom of establishment

MSIG Specialty Marine NV is a member of MS&AD Insurance Group Holdings, Inc.

www.msigspecialtymarine.com

A member of **MS&AD** INSURANCE GROUP